

- Sez./Sect. “F” -

INSTALLAZIONE MOTORE / ENGINE INSTALLATION

Trasporto e sollevamento dei motori disimballati / Transport and handling of the unpacked engine

Quando il motore è disimballato e pronto al trasporto, usare ESCLUSIVAMENTE gli appositi golfari di sollevamento.


Scegliere un equipaggiamento per il sollevamento con una appropriata capacità di carico, completo di ganci di sicurezza appropriati per il sollevamento del carico in questione.


Per le istruzioni di sicurezza relative alle operazioni di sollevamento e trasporto, fare riferimento al capitolo delle istruzioni di sicurezza.

When the engine is unpacked ready for transport, use **EXCLUSIVELY** the appropriate lifting eyebolts.

Choose the lifting equipment with appropriate load capacity, equipped with safety hooks suitable for lifting the load in question.

For safety instructions regarding lifting and handling operations, please refer to Chapter regarding safety instructions.

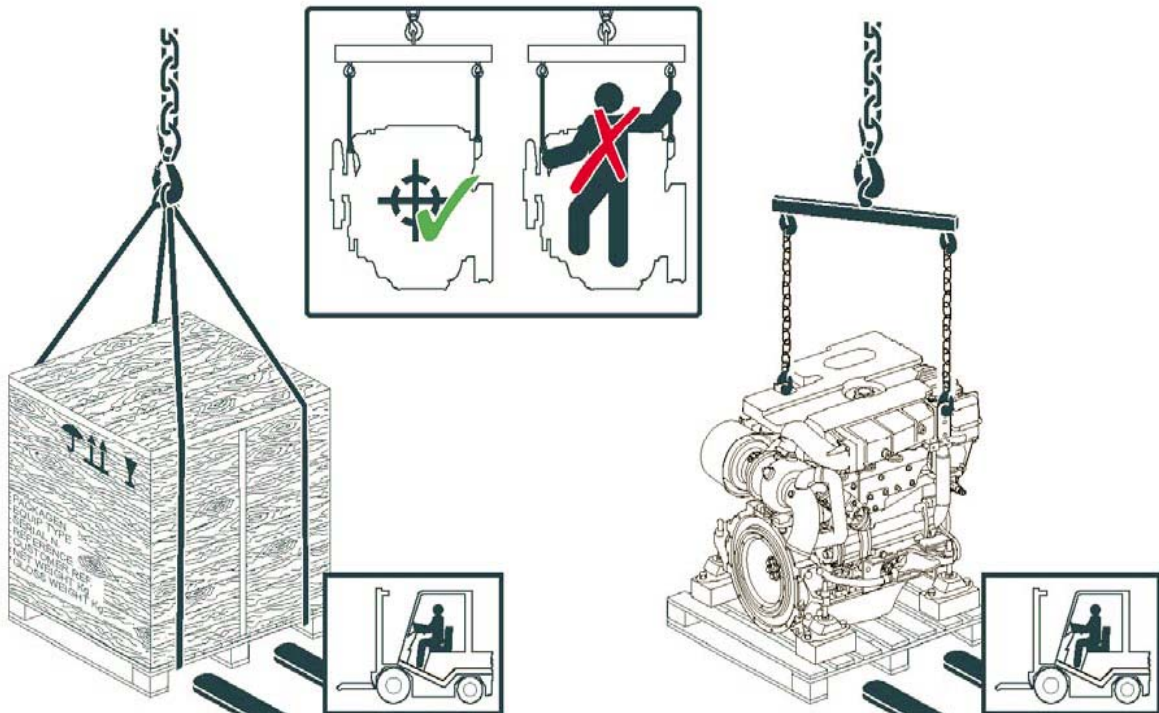

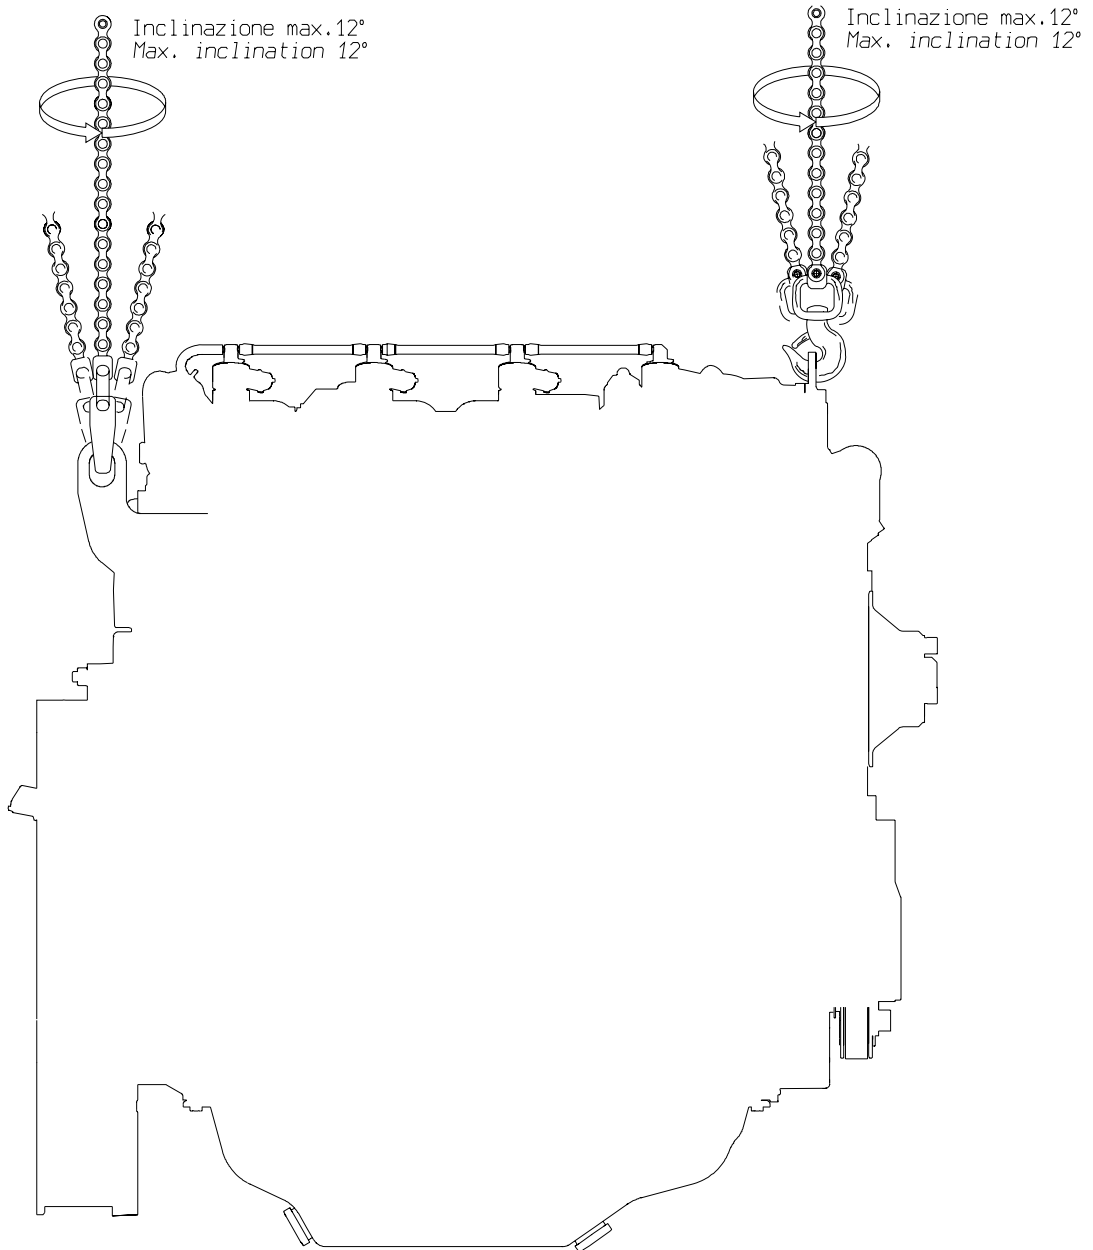

Attenzione: L'inclinazione massima delle funi rispetto alla verticale non deve superare i 12°



Attention, maximum inclination of ropes from the vertical line must not exceed 12°